

Light Cove


Instructions

1) Align Mirage Series Light Cove to drywall

2) Slide light cove onto exceeded drywall

3) Fasten light cove to drywall with 1 inch self tapping screws

4) Mud and Finish light cove
Ready for Primer and Paint

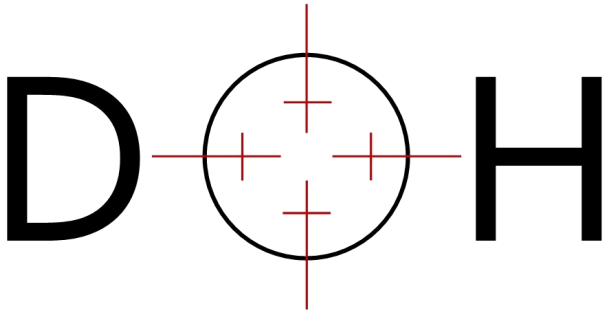

Contemporary Construction Products

DORR HOUZZER USA, LLC

DorrHouzzler.com

info@DorrHouzzler.com

844.MY.DORRS | 844.693.6667

DORR HOUZZER™
IT'S WHAT YOU CAN'T SEE

MADE IN THE USA






INSTALLATION
INSTRUCTIONS


LIGHT COVES

Mirage Series

Installation

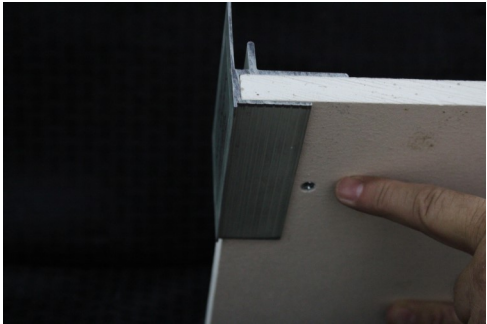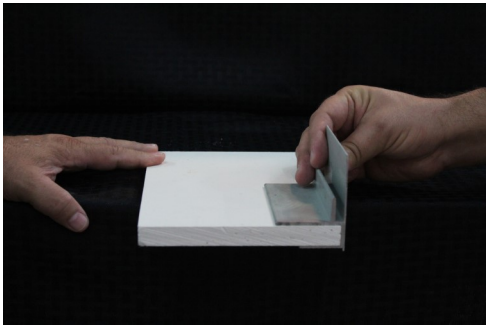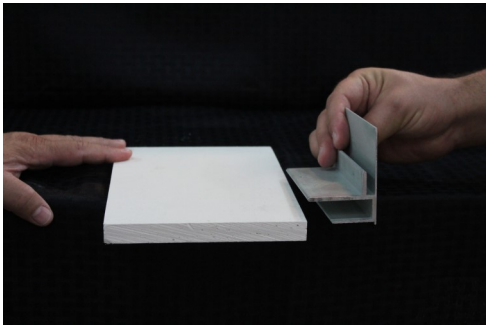


Joint Assembly Instructions

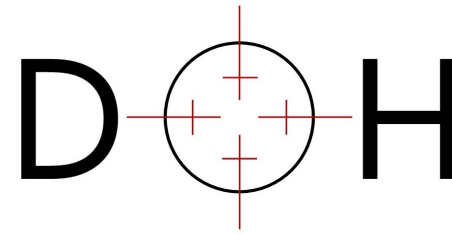

Corner Assembly Instructions



1) Use metal file to bevel edges

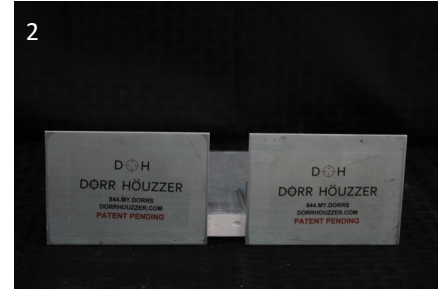


2) Insert light cove onto drywall




3) Align light coves together



4) Apply construction adhesive onto key
(Loctite Power Grab Ultimate –A)

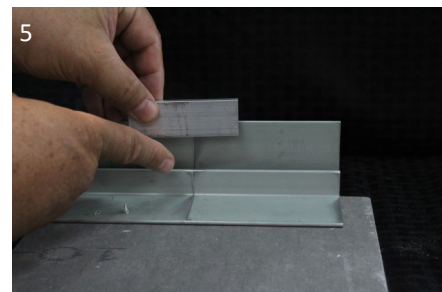

5) Insert Splice Key and set

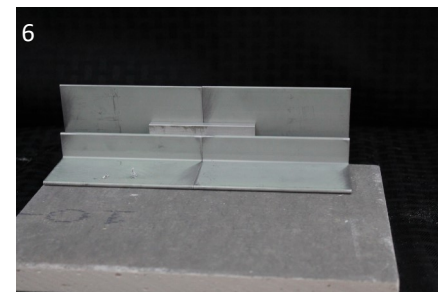


6) Fasten light cove onto drywall




7) Apply sand able epoxy to face of
joint
(Loctite Metal/Concrete Epoxy—B)
Primer and Paint



1) Align corner with light cove to drywall

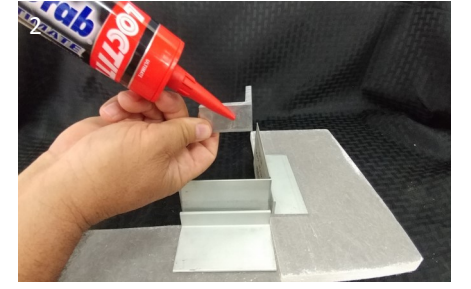


2) Apply construction adhesive onto key
(Loctite Power Grab Ultimate –A)

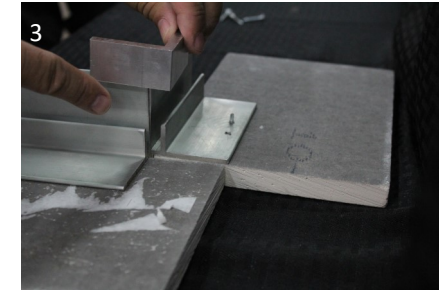


3) Insert Corner Key into channel



4) Set Corner Key

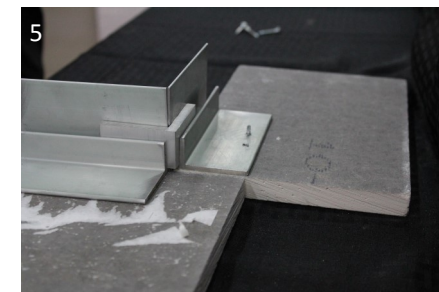

5) Fasten light cove to drywall

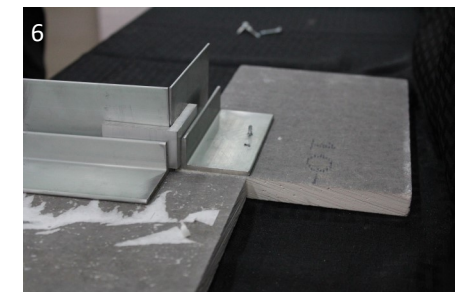

6) Primer and Paint